



Huetiful™

## OPERATING INSTRUCTIONS




HYDRATE YOUR HAIR  
with the Huetiful™ Hair Steamer

## THE PARTS



MAIN UNIT

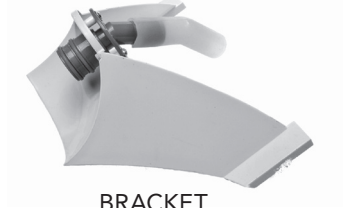

BRACKET



HAIR HOOD & WATER DRAIN



FACIAL ATTACHMENT

## ASSEMBLING THE HAIR STEAMER


1. Insert the Bracket nozzle into the main unit.



2. Press firmly down on the Bracket to ensure that no steam can escape through the hole.



3. Connect the two flaps on the Hair Hood into the Bracket.

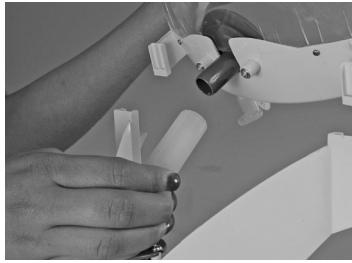

4. Connect the rubber silica pipe from the Bracket over the protruding nozzle on the Hair Hood.



5. Ensure silica pipe is snugly around the nozzle.

6. Add water through the top of the Main Unit.



7. Ensure that the water doesn't exceed the MAX line or the alarm will sound once the water begins to boil.



8. Turn the power button to "ON". Then, turn the "Ozone" button on.



Watch assembly video at: [www.behuetiful.com/howto](http://www.behuetiful.com/howto)

## ASSEMBLING THE FACIAL STEAMER

1. Insert the Facial Attachment into the Main Unit hole by lining up the two notches on the Facial Attachment with the two notched on the Main Unit.
2. Twist the Facial Attachment to secure it into the Main Unit.
3. Rotate or spin the Facial Attachment so that the vent is facing away from you and the hole is facing towards you.
4. Follow steps 6-8 from Hair Steamer Assembly instructions.
5. Start 18 inches from facial steamer to avoid too much heat. Then, move closer based on your personal level of comfort.



Watch assembly video at: [www.behuetiful.com/howto](http://www.behuetiful.com/howto)

## USAGE

1. Pre-poo, Shampoo and Condition as you typically would during your routine.
2. Condition or Deep Condition your hair, but don't rinse out. We recommend Huetiful™ brand conditioners which are developed to complement the Hair Steamer's ozone steam. While conditioner is setting (3-5 minutes) continue setup.
3. Place the steamer on a stable table or countertop.
4. Add water just below the MAX line.
5. Plug the Huetiful™ Hair Steamer into the electrical outlet.
6. Switch on the ON/OFF and ON/OFF Ozone, allowing the Huetiful™ Hair Steamer to boil the water into steam (about 2 minutes).
7. Put your head into the Hair Hood carefully and adjust your position in the chair (or height of the chair if possible) so that you are comfortably underneath the Hair Hood.



## CONDENSED WATER REMOVAL

Condensed water from the steam must be drained from the Huetiful™ Hair Steamer after each use. While steaming, the condensed water drips down from the inside of the Hair Hood and collects in the basin. The Water Plug must be removed and the condensed water will drain from the basin. Make sure you have a cup to catch the water before you remove the Water Plug.

## TROUBLESHOOTING

There are rare instances when your Huetiful™ Hair Steamer may not function properly. Based on our research and customer feedback, these five steps should be taken to help trouble shoot the issue.

1. Always ensure that the power and ozone buttons are “OFF” before plugging the unit in. For safety purposes, the unit will not turn “ON” if water is not in the cup and the unit is v in. This is done for safety reasons.
2. Ensure that the cup is screwed tightly into the Main Unit. The cup is designed to both screw in and unscrew. The device will not properly work if the cup is not screwed into the Main Unit and if the handle of the cup is not in between the protective plastic covers.
3. Add water through the top of the Main Unit into the cup. The water level must be below the MAX line. If the water is filled above the MAX line, a sensor prohibits it from turning on for safety reasons.
4. Ensure that the bracket is firmly pressed against the Main Unit. This prevents air from entering into the water cup; which can cause the unit to not turn on properly.
5. Ensure that the hose from the Hair Hood is tightly over the nozzle on the Bracket.
6. Turn the unit “ON”. Turn the ozone button “ON”.

If you are still having trouble with your Huetiful™ Hair Steamer or Facial Steamer attachment, contact our Customer Support Team at [support@behuetiful.com](mailto:support@behuetiful.com).

## FREQUENTLY ASKED QUESTIONS

Q: *Is there a warranty?*

A: Yes. Every Huetiful Hair Steamer comes with a one-year replacement part warranty.

Q: *What are the benefits?*

A:

- **Healthy Hair** – Hydrates your hair 5x better than conditioner alone to reduce breakage and split ends—the leading hair frustrations among women with naturally curly hair.
- **Convenience** – Easy to setup. In just 20 minutes, the Huetiful Hair Steamer provides a quick and easy way to treat your hair from the comfort of your home.
- **Savings** – Avoid expensive hair treatments done outside of the home and eliminate all of those unwanted, half-used bottles of conditioner that never seem to do the trick.

Q: *What makes Huetiful™ a different kind of company?*

A: Because Huetiful is headquartered in Atlanta and has its roots in the Washington Heights section of Harlem (also known as “The Heights” or “Spanish Harlem”), we’re intimately familiar with your beauty and hair care needs. Our Dominican and African-American heritage and ownership spills into our passion to provide solutions for women of all shades of color or “hues”. That is the Huetiful Promise.

## CONTACT US

If you have additional questions or comments, contact us at [www.behuetiful.com/deskprov](http://www.behuetiful.com/deskprov). We ask that you provide feedback and testimonials wither on our website at [www.behuetiful.com](http://www.behuetiful.com) or on our Facebook page. Video testimonials are especially appreciated.



4060 Peachtree Road, Suite D517  
Atlanta, GA 30319

For more information, email:  
[www.behuetiful.com/deskpro](http://www.behuetiful.com/deskpro)

---

[www.behuetiful.com](http://www.behuetiful.com)

follow us on:

